

Interop Channel Usage

Activation / De-Activation

Quick Steps

Activating VTAC 36 (5-Ste Channel)

- Step 1 Call "503 831 5965"
- Step 2 Enter pass code "8836"
- Step 3 Then press "#"
- Step 4 Select Control number "1"
- Step 5 Then press "#"
- Step 6 Press "1" to enable channel
Press "2" to de-activate channel
- Step 7 System will announce
"Polk County VTAC 36 is currently operated" or
"Polk County VTAC 36 (or 37) is currently released"
- Step 8 Hang up – you are now either operational or
you have released channel and channel is off.

Activating VTAC 37 (3-Site Channel)

- Step 1 Call "503 831 5965"
- Step 2 Enter pass code "8836"
- Step 3 Then press "#"
- Step 4 Select Control number "2"
- Step 5 Then press "#"
- Step 6 Press "1" to enable channel
Press "2" to de-activate channel
- Step 7 System will announce
"Polk County VTAC 37 is currently operated" or
"Polk County VTAC 36 (or 37) is currently released"
- Step 8 Hang up – you are now either operational or
you have released channel and channel is off.

**Note: If the system miss reads a digit, the system will return you to the main menu
and you will need to push "4" to get into the control menu**

Over the Air Activation

If a phone is not available, you can activate or deactivate the channels over the radio.

For VTAC 36 Press DTMF – digit 1 turns on VTAC 36, pressing digit 2 turns VTAC 36 off

For VTAC 37 Press DTMF – digit 3 turns on VTAC 36, pressing digit 4 turns VTAC 36 off

There will be no response other than the channel starts working or goes off following the command entered.